

 
CONNECTION INSTRUCTIONS

Receiver for T1, T2, T3, T3M, WiFi-102 & 103 Controllers




ADDRESS SETTING
Use this button to pair Receiver to RF Remote or WiFi Controller.

Top View of Wireless Receiver

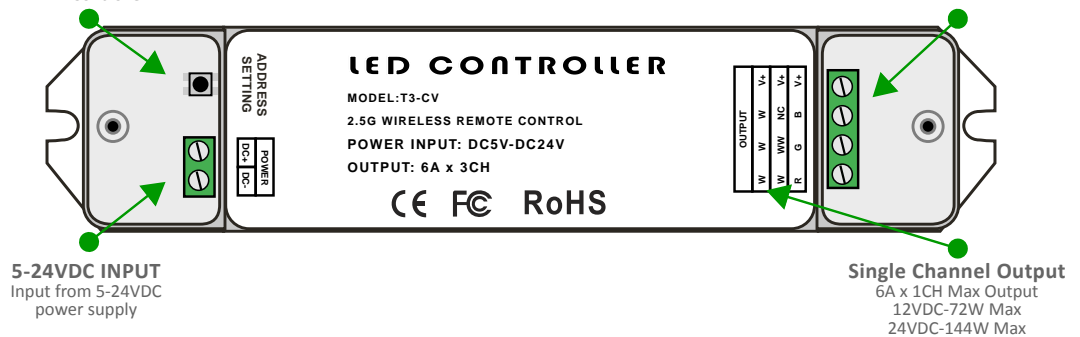

T1 8 Zone LED Sync Dimmer (6A x 3CH)


Zone Pairing Instructions

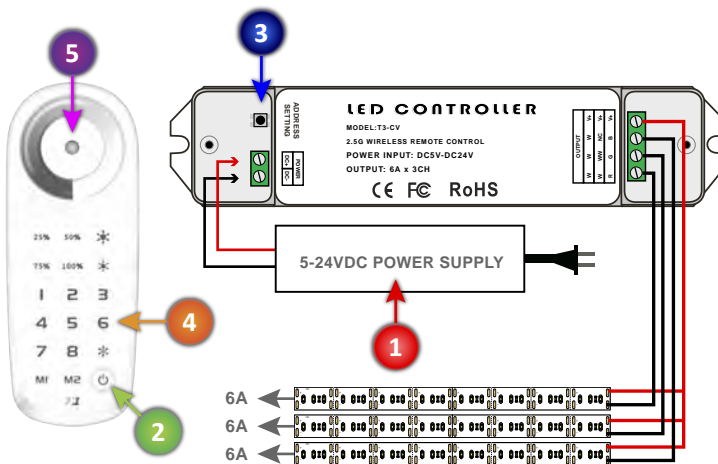

- 1 Apply 5-24VDC power to your wireless receiver
 - 2 Turn on power to your T1 remote
 - 3 Press the address setting button once on your receiver and let go, the 'run' indicator light will turn solid red
 - 4 Immediately press and hold the zone number on the T1 remote that you wish to pair
 - 5 Continue holding the zone number button until you hear a long beep, the LED light on the T1 remote will flash 3 times when pairing is successful
- The zone is now paired, repeat these steps for multiple zones and receivers
 - To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep


T2 Temp Adjust LED Sync Controller (6A x 2CH)

 Receiver Pairing Instructions

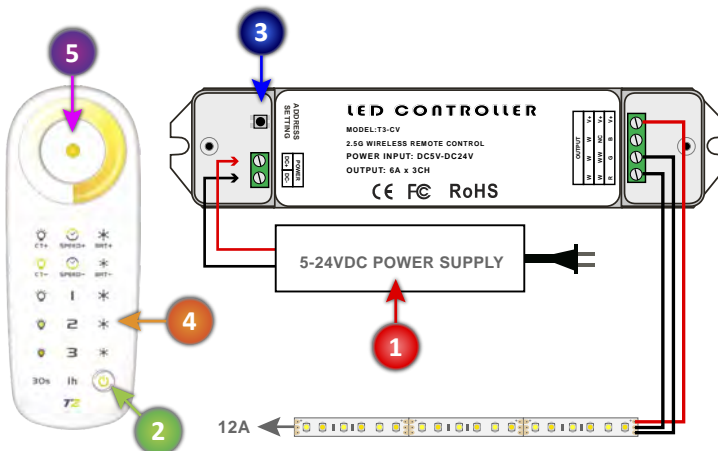

- 1 Apply 5-24VDC power to your wireless receiver
 - 2 Turn on power to your T2 remote
 - 3 Press the address setting button once on your receiver and let go, the 'run' indicator light will turn solid red
 - 4 Immediately press and hold any button on the T2 remote
 - 5 Continue holding the button until you hear a long beep, the LED light on the T2 remote will flash green 3 times when pairing is successful
- The zone is now paired, repeat these steps for multiple receivers
 - To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep


T3 RGB LED Sync Controller (6A x 3CH)

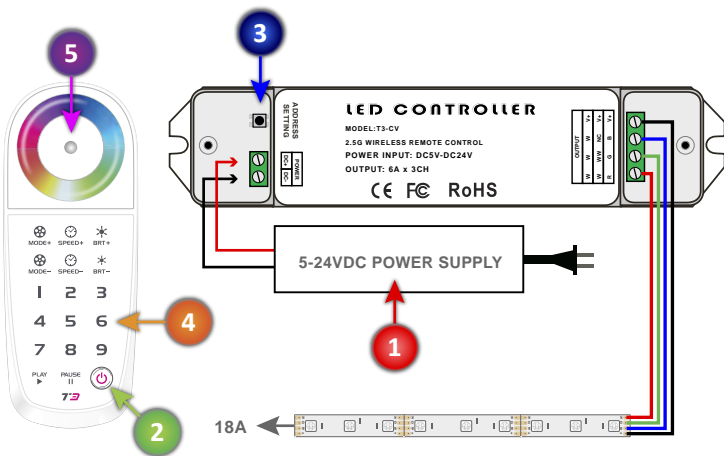

Receiver Pairing Instructions

- 1 Apply 5-24VDC power to your wireless receiver
 - 2 Turn on power to your T3 remote
 - 3 Press the address setting button once on your receiver and let go, the 'run' indicator light will turn solid red
 - 4 Immediately press and hold any button on the T3 remote
 - 5 Continue holding the button until you hear a long beep, the LED light on the T3 remote will flash green 3 times when pairing is successful
- The zone is now paired, repeat these steps for multiple receivers
 - To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep

 
T3M 10 Zone RGB LED Sync Controller (6A x 3CH)

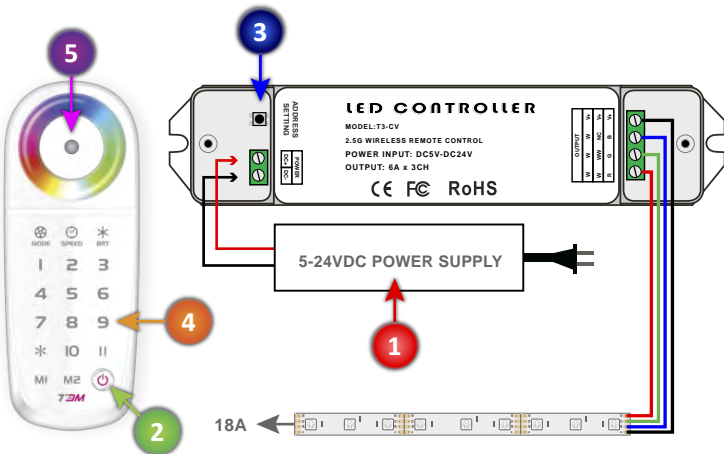

Zone Pairing Instructions

- 1 Apply 5-24VDC power to your wireless receiver
 - 2 Turn on power to your T3M remote
 - 3 Press the address setting button once on your receiver and let go, the 'run' indicator light will turn solid red
 - 4 Immediately press and hold the zone number on the T3M remote that you wish to pair
 - 5 Continue holding the zone number button until you hear a long beep, the LED light on the T3M remote will flash 3 times when pairing is successful
- The zone is now paired, repeat these steps for multiple zones and receivers
 - To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep

WiFi-102 & 103 RGB LED Controller

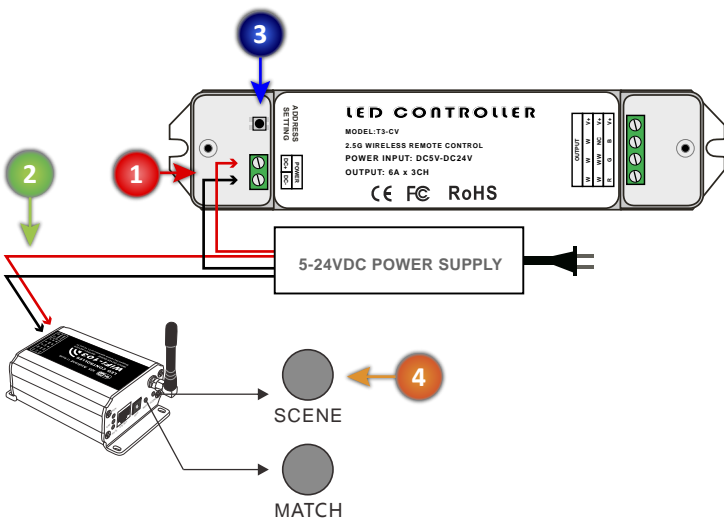

Receiver Pairing Instructions

- 1 Apply 5-24VDC power to your wireless receiver
 - 2 Apply 5-24VDC power to your WiFi-102 or WiFi-103 controller
 - 3 Press the address setting button once on your receiver and let go, the 'run' indicator light will turn solid red
 - 4 Immediately press and hold the 'SCENE' button on your WiFi Controller
- Continue holding the 'SCENE' button until you hear a long beep, your pairing is now successful
 - Repeat these steps for multiple receivers
 - To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep