

Zone Pairing Instructions

 
- 1.) Apply 5-24VDC power to your wireless receiver
- 2.) Turn on power to your T3M remote
- 3.) Press the address setting button once on your wireless receiver and let go
- 4.) The small address setting indicator light will turn solid red
- 5.) Immedietaly press and hold the zone number on the T3 remote that you wish to pair to
- 6.) Hold until you hear a long beep
- 7.) The LED light on the T3M remote will flash 3 times
- 8.) Your wireless receiver is now paired to that zone
- 9.) Repeat this process for multiple zone receivers
- 9.) To un-pair a receiver press and hold the address setting button for 5 seconds until a long beep

(U)	C	ON/OFF	• Turn on or turn off the receiver of the current zone .
	П	PAUSE	 Short press the key to stay or change at current color in current zone control. Press this button in 3 seconds, the buzzer can be on or off.
	MODE	MODE	• Press the key to select mode in current zone control.
(SPEED) +	SPEED	SPEED	 Press the key to adjust speed in current zone control.
	K	BRT	 Press the key to adjust brightness in current zone control. Keep pressing to adjust brightness continuously.
		Full-Color of touch adjusting circle	When touching the full-color circle, LED lights in current zone will show the same color as the circle.
	I 2 3 4 5 6 7 8 9 * 10	Zone option button	 Select one of the zone: Press keys 1-10 on the remote control. Select zone control arbitrarily :Press"*+any numeral+*", take selecting 456 as a zone, should press"*456*" All choose(10 zones): Press"** twice.
	M1 M2	Scene- saved button	Press for 3 seconds, can record the scene mode in the 10 current zone control. M1 M2 can record 2 zone's scene mode.

EcolocityLED.com info@EcolocityLED.com



Receiver sign Remote control sign Button



Description