
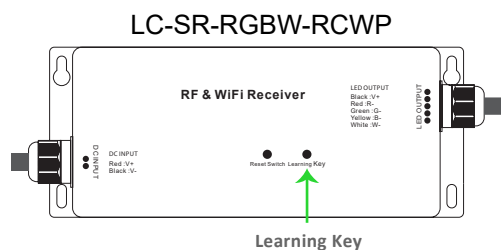
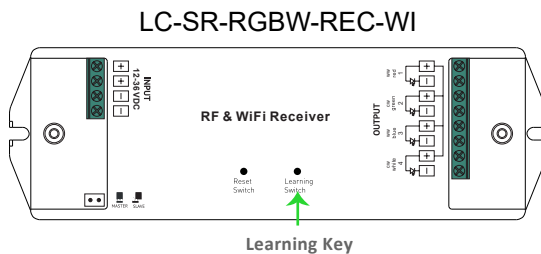
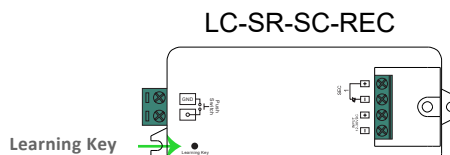


CONNECTION INSTRUCTIONS


Single Color 4 Zone Remote Control LED Dimmer

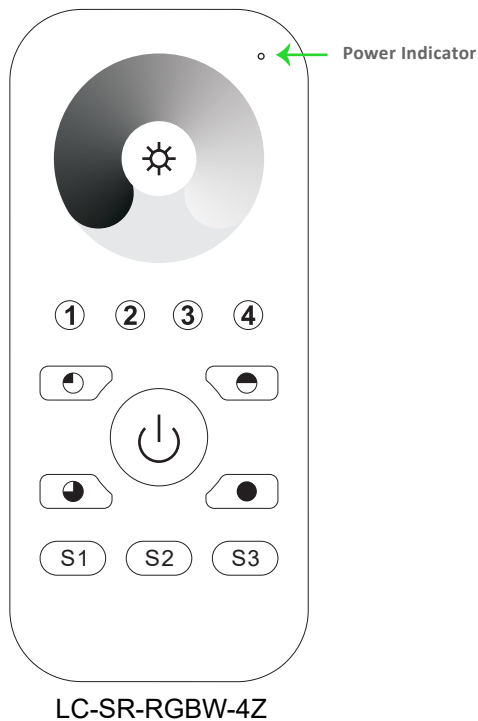




4 Zone Single Color Remote / Receiver Pairing Instructions

1

Wire DC power to the input and LED lights to the output of the wireless receiver.

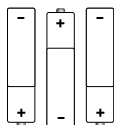

Insert 3 x AAA batteries into remote control. Press power button on remote, indicator light should be red.

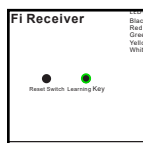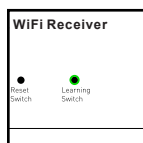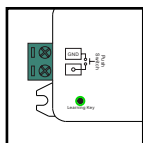


2

With power applied to the wireless receiver press and release the learning key.

3


Quickly press the zone number that you wish to pair the receiver to. Remember that the power of your remote must be on, indicated by a red light on the top right of the remote.

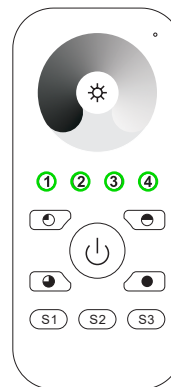

4

Immediately after choosing the zone slide your finger around the dimmer wheel. You must slide the wheel, simply touching it will not work.

Single color output lights will flash indicating a successful pairing.

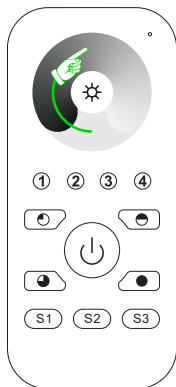

5

To pair multiple receivers, repeat steps 1-4.

6

To unpair a receiver, press and hold the learning key for roughly 10 seconds. Lights will flash when unpaired.