CONNECTION INSTRUCTIONS

UL Recognized 8 Zone RGBW LED Remote Control

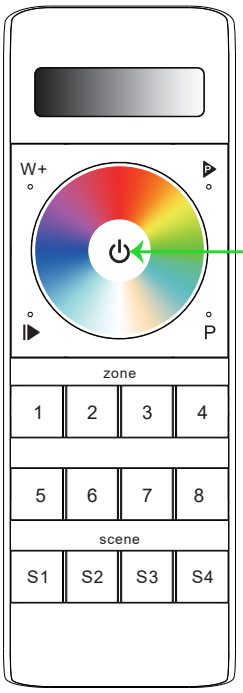

Power Indicator

LC-SR-RGBW-8Z

LC-SR-RGBW-RCWP

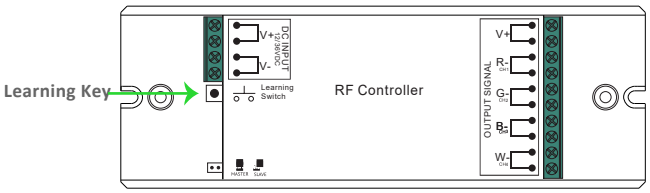

LC-SR-RGBW-REC-WI

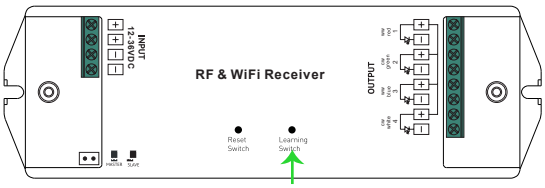

Learning Key

LC-SR-RGBW-RC / LC-SR-RGBW-RCWP

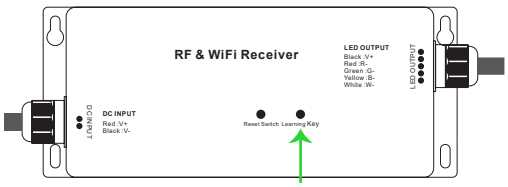

Learning Key

8 Zone RGBW Remote / Receiver Pairing Instructions



1

Wire DC power to the input and LED lights to the output of the wireless receiver.

Insert 3 x AAA batteries into remote control. Press power button on remote, indicator light should be red.

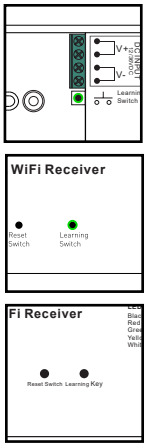

2

With power applied to the wireless receiver press and release the learning key.

3

Quickly press the zone number that you wish to pair the receiver to. Remember that the power of your remote must be on, indicated by a red light on the top right of the remote.

4

Immediately after choosing the zone slide your finger around the color wheel. You must slide the wheel, simply touching it will not work.

RGBW output lights will flash white indicating a successful pairing.

5

To pair multiple receivers, repeat steps 1-4.

6

To unpair a receiver, press and hold the learning key for roughly 10 seconds. Lights will flash white when unpaired.

1092 Greg Street
Sparks, NV 89431, USA

ECOLOCITY
LED LIGHTING SOLUTIONS

ECOLOCITYLED.COM
775-636-6060