

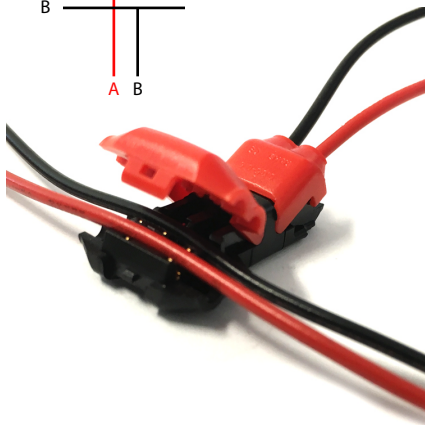


## CONNECTION GUIDE

### 1 Wire Solderless Snap Down T Connectors

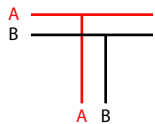

**1.)** Firmly insert your 18-24AWG wires through the wire hole guides and over the conductive metal blades.

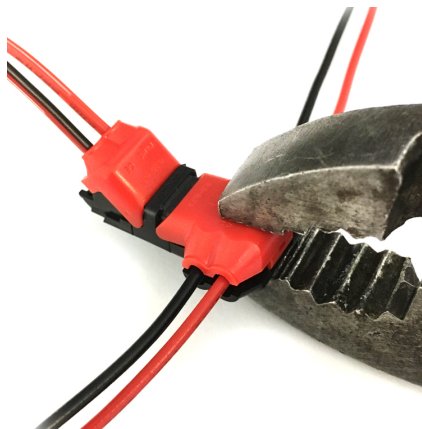

**2.)** Using a pair of pliers firmly snap the connector top down. The small red tabs on the bottom will click into place.



**3.)** Clamp both sides of the connector and test continuity.